

Assembly Instructions

Assemble the Center Limbs

Each Limb Requires:

- (1) 46" Unsplit Limb
- (1) Shorter Pre-Assembled Limb (has black pin near the bottom)
- (1) Shroud Retainer (Black pin)

Step 1: The 46" unsplit limb has a predrilled hole on one end. Locate it. That end needs to stay down.

Step 2: Slide the top end of the unsplit limb (end without a hole) into the bottom of the assembled limb until it stops.

Step 3: There's a hole pre-drilled in the assembled limb, and the new limb you slid into it should have it closed it up. Locate the pre-drilled hole and drill through that same hole, drilling into the unsplit limb.

Step 4: Insert a shroud retainer clip attaching all 3 pieces together.

Repeat the same process above for the remaining 5 center limbs.

Assemble the Base & Attach Center Limbs

Step 1: Stack each of the 3 steel sections on top of each other, lining up the slotted center hole.

Step 2: Slide one of the flat washers onto the bolt, and then insert the bolt, from the top, down through the 3 pieces of base.

Step 3: Slide a flat washer, lock washer, and nut onto the bolt, and for now, just hand tighten.

Step 4: Lay the base on its side – **the sections could move and pinch your fingers, so be careful when moving it around until it's fully tightened.**

Step 5: Slide each of the limbs onto the middle 6 uprights on the base.

Step 6: Align the hole on the limb with the hole on the base, and insert the shroud retainer clip.

Repeat this for all of the center limbs.

Assemble & Install the Outer Limbs

Each Limb Requires:

- (6) Longer Pre-Assembled Limbs (has black pin near the middle)
- (6) 10" Stems

Step 1: Insert the stem into the bottom of the pre-assembled limb so the two are flush with each other.

Step 2 : Locate the pre-drilled hole in the stem, and drill a hole through the same spot.

Step 3: Align the hole on the limb with the hole on the base and insert the shroud retainer.


Repeat these steps for the remaining 5 outer limbs.

Install and Go Fishing!

Step 1: Spread the 3 sections of the base into a star pattern and fully tighten the hardware with the socket and wrench.

Step 2 : Fold the leaves back onto themselves to spread them out as necessary.

Step 3: Toss into the water and watch it sink!

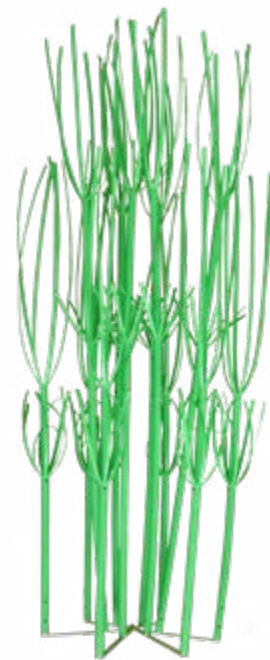

WARNING
Drowning hazard. Do not
install where swimming
and diving may occur.

Package Contents

- (3) Sections of 34" Galvanized Steel
- (6) Fully Assembled LONG Limbs*
*1 retainer shroud already installed in each near the MIDDLE of the limb
- (6) Fully Assembled SHORT Limbs*
*1 retainer shroud already installed in each near the BOTTOM of the limb
- (6) 46" Unsplit Limbs
- (6) 10" Stems
- (18) Shroud Retainers
- (1) 1-½" x ¾" Bolt
- (2) ¾" Flat Washers
- (1) ¾" Lock Washer
- (1) ¾" Nut
- (1) ¼" Drill Bit

Tools Needed for Assembly

- 9/16" socket
- 9/16" wrench
- Cordless drill